

# CS2-TM MULTIFUNCTION Totalizer (Pulse input)

## DESCRIPTION

The CS2-TM(Pulse Input) is innovation totalizer.

- Adtek builds in high technology with wide input range from 0.01Hz~ 140.00KHz with auto-range function at same unit. There are three setting modes for K factor, 1/K factor and flow speed to match the difference output description of flow-meters.

The Totalizer provides high accuracy measurement, display, control and communication (Modbus RTU mode) of Pulse from Flowmeter or encoder, proximity switch, photo switch for length control.


There are two display screen and 3 external control input (DI) in standard and the optional 4 Relay, 1 Analogue, 1 Pulse and RS485 port available. They are also support fantastic control function as like as N, R, C mode for totalizer and batch control.



## FEATURE

- Measuring Pulse auto range 0.01Hz~100KHz(optional:140KHz); Contact / NPN / PNP / Voltage Pulse can be switch on rear of meter
- Accuracy of immediate Value:  $\pm 0.005\%$ ; Decimal Point auto moving according to input frequency
- Dual display screen for 10 digital Totalizer or Batch counter + 4 2/3 Immediate Value (PV) or 6 digital Batch programmable.
- 4 relay can be individual programmed to relative immediate value (PV) or totalizer / batch / batch counter.
  - Relative to Immediate Value (PV): Functions settable Energized Mode Hi / Lo / Hi (Lo) Hold / DO / Go, Hysteresis, Energized Delay, De-energized Delay, Energized latch or Energized by RS485 command.
  - Relative to Totalizer / Batch / Batch Counter: N / R / C mode and energized time programmable.
- 3 external control input can be individual programmed for immediate value (PV) or totalizer / batch / batch counter.
  - Immediate Value (PV): PV Hold / Reset for Maxi. (or Mini.) Hold / DI / Reset for Relay Energized Latch
  - Totalizer / Batch / Batch Counter: Reset, Gate
- Analogue Output and Pulse Output available in option
- RS485(Modbus RTU mode), Baud Rate is up to 38400bps
- Comply to CE standard & RoHS

## ORDERING INFORMATION

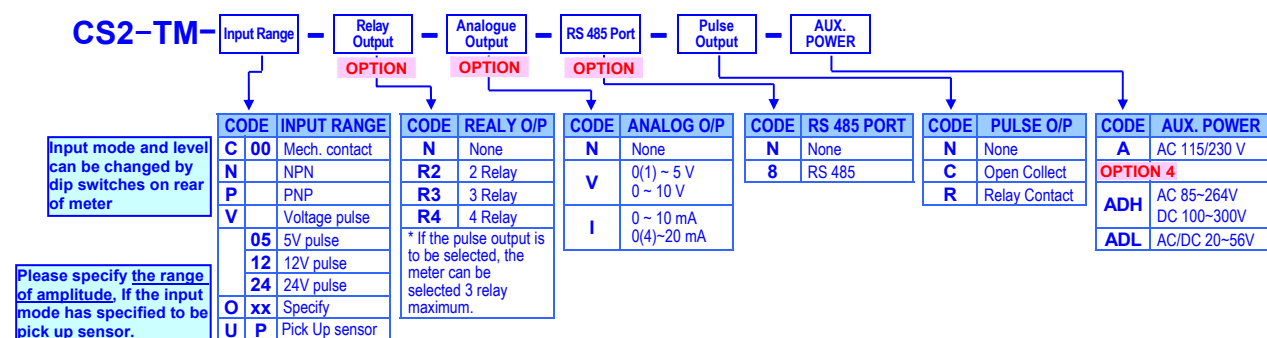

## TECHNICAL SPECIFICATION

| Input   |                |  |
|---|----------------|--|
| Input Frequency   | Input Mode     | Input Level  |
| 0.01Hz ~ 50 Hz  | Mech. Contact  |  |
| 0.01Hz ~ 50 Hz<br>0.01Hz ~ 100KHz<br>0.01Hz ~ 140KHz (optional)   | NPN            | High Level: over 2/3 of input level<br>Low Level: under 1/3 of input level |
|   | PNP            |  |
|   | Voltage Pulse  |  |
|   | Pick Up Sensor | Specified by order   |
| Input Mode(NPN, PNP, Contact) & Level(5Vp, 12Vp, 24Vp) changeable by dip switch of rear terminal block. |                |  |

**Calibration:** Doesn't need calibration

**Input range:** Auto range: 0.01Hz~100kHz(~140kHz in option)

**Accuracy:**  $\leq \pm 0.005\%$  of FS  $\pm 1C$  for immediate value(PV);

**Sampling rate:** 15 cycles/sec( $\geq 15\text{Hz}$ );  
f cycles/sec( $\leq 15\text{Hz}$ )

**Response time:**  $\leq 100$  m-sec.(when the AvG = "1") in standard

### Time out function:

Auto, Manual programmable, In manual mode, the period of time out can be set 0.0 sec~999.9sec

### Display & Functions

#### LED:

**Numeric:** Up screen: 10 digits, 0.28" red high-bright LED  
Down screen: 6 digits, 0.28" green high-bright LED

**Relay output indication:** 4 square red LED

**RS 485 communication:** 1 square orange LED

**E.C.I. function indication:** 3 square green LED

**Max/Mini Hold indication:** 2 square orange LED

#### Up screen selection:

Up screen can be programmed to show Totalizer(10digits) or Batch Counter(10 digits)

#### Down screen selection:

Down screen can be programmed to show Batch(6 digits) or Immediate Value(5 digits)

#### Display range:

**Immediate Value(PV):** 0~99999;  
**Batch:** 0~999999  
**Totalizer / Batch Counter:** 0~9999999999

**For Immediate Value(PV)**

**Time unit(Flow/T unit):** Flow/second, Flow/Min, K\*Flow/Min, Flow/Hour, K\*Flow/Hour programmable

**Resolution of PV:** Decimal point will Auto-changed according to input  
(Auto-Moving for d.p.) **Auto / Semi-Auto / Fix; 3 mode programmable**

**Over range indication:** **oofL**, when input is over 20% of input range Hi

**Max / Mini recording:** Maximum and Minimum value storage during power on.

**Display functions:** **PV / Max(Mini) Hold / RS 485 / Batch programmable** for down screen.

**Factor setting:** there are 3 parameter modes can be set

**Pulse/Flow-unit(K factor):** settable range: 0.0001~99999

**Flow/Pulse (1/K factor):** settable range: 0.0001~99999

**Volume/Hz with diameter of pipe:**

Diameter settable range: 0.0001~99999

Volume/Hz(Flow rate) settable: 0.0001~99999

**Front key functions:** Up and down key can be set to be a function as ECI.

**Low cut:** Settable range: -19999~29999 counts

**Digital fine adjust:** **PuPno**: Settable range: 0~99999

**PuSPn**: Settable range: 0~99999

**For Totalizer / Batch / Batch Counter**

**Decimal point:** Settable: 0 / 0.0 / 0.000 / 0.000 / 0.0000

(If time unit set to be K\*Flow/Min or K\*Flow/Hour, the decimal point is settable 0.0 / 0.000 / 0.000 / 0.0000)

**Over flow indication:** Overflow **oofL** / Re-cycle **rcyCL** counting programmable

**Reading Stable Function**

**Average:** Settable range: 1~99 times

**Moving average:** Settable range: 1(One)~10 times

**Control Functions(option)**

**Set-points:** Four set-points

**Control relay:** Four relays

Relay 2 & Relay 3: Dual FORM-C, 5A/230Vac, 10A/115V

Relay 1 & Relay 4: Dual FORM-A, 1A/230Vac, 3A/115V

**Relay energized mode:** Multi-cross selection for immediate Value(PV), batch, batch counter and totalizer.

**For Immediate Value(PV)**

Hi / Lo / Go.12 / Hi.HLd / Lo.HLd / DO programmable;

**DO function: Energized by RS485 command of master.**

**D.P. of Set Point:** 0 / 0.0 / 0.00 / 0.000 / 0.0000

Start delay / Energized & De-energized delay / Hysteresis / Energized Latch

**Start band**(Minimum level for Energizing): 0~9999counts

**Start delay time:** 0:00.0~9(Minutes):59.9(Second)

**Energized delay time:** 0:00.0~9(Minutes):59.9(Second)

**De-energized delay time:** 0:00.0~9(Minutes):59.9(Second)

**Hysteresis:** 0~5000 counts

**For Totalizer / Batch / Batch Counter**

**Energized mode:** N / R / C Mode

**Period of Relay on:** 0:00.0~9(Minutes):59.9(Second)

**External Control Inputs(ECI)**

**Input mode:** 3 ECI points, Contact or open collect input, Level trigger

**Functions:** Multi-cross selection for immediate Value(PV), batch, batch counter and totalizer.

**Debouncing time:** Settable range 5 ~255 x (8m seconds)

**For Immediate Value(PV)**

**Functions:** Relative PV / PV Hold / Reset Max or Mini. Hold / DI / Reset for Relay Energized latch programmable

**For Totalizer / Batch / Batch Counter**

**Functions:** Gate for Totalizer and(or) Batch(Batch Counter) / Reset for Totalizer and(or) Batch(Batch Counter) programmable

**Analogue output(option)**

**Accuracy:**  $\pm 0.1\%$  of F.S.; 16 bits DA converter

**Ripple:**  $\leq \pm 0.1\%$  of F.S.

**Response time:**  $\leq 100$  m-sec. (10~90% of input)

**Isolation:** AC 2.0 KV between input and output

**Output range:**

Specify either Voltage or Current output in ordering

**Voltage:** 0~5V / 0~10V / 1~5V programmable

**Current:** 0~10mA / 0~20mA / 4~20mA programmable

**Voltage:** 0~10V:  $\geq 1000\Omega$ ;

**Current:** 4(0)~20mA:  $\leq 600\Omega$  max

**Relative to immediate value(PV), totalizer, batch or batch count programmable**

**RaH5** (output range high):

Settable range: 0~99999 / 0~999999999

**RaL5** (output range Low):

Settable range: 0~99999 / 0~999999999

**RaLHt** (output High Limit): 0.00~110.00% of output High

**RaPno**: Settable range: -38011~+27524

**RaSPn**: Settable range: -38011~+27524

**Digital fine adjust:****Pulse output(option)**

**Output mode:**

Open collect: 30V/60mA or Relay: DC24V/1A

**Output vs. parameter:**

Relative to totalizer, batch or batch count programmable

**Output range:**

1000Hz max. duty cycle 50%

**Duty cycle(PLSH):**

Settable from 0(Auto: Duty cycle=50%)/1~5000(x 4msec.)

**Pulse divider:**

Settable range from 1~9999.

**RS 485 Communication(option)**

**Protocol:**

Modbus RTU mode

**Baud rate:**

1200/2400/4800/9600/19200/38400 programmable

**Data bits:**

8 bits

**Parity:**

Even, odd or none (with 1 or 2 stop bit) programmable

**Address:**

1 ~ 255 programmable

**Remote display:**

to show the value from RS485 command of master

**Distance:**

1200M

**Terminate resistor:**

150 $\Omega$  at last unit.

**Electrical Safety**

**Dielectric strength:**

AC 2.0 KV for 1 min, Between Power / Input / Output / Case

**Insulation resistance:**

$\geq 100M$  ohm at 500Vdc, Between Power / Input / Output

**Isolation:**

Between Power / Input / Relay / Analogue / RS485 / E.C.I.

**EMC:**

EN 55011:2002; EN 61326:2003

**Safety(LVD):**

EN 61010-1:2001

**Environmental**

**Operating temp.:**

0~60  $^{\circ}$ C

**Operating humidity:**

20~95 %RH, Non-condensing

**Temp. coefficient:**

$\leq 100$  PPM/ $^{\circ}$ C

**Storage temp.:**

-10~70  $^{\circ}$ C

**Enclosure:**

Front panel: IEC 529 (IP52); Housing: IP20

**Mechanical**

**Dimensions:**

96mm(W) x 48mm(H) x 120mm(D)

**Panel cutout:**

92mm(W) x 44mm(H)

**Case material:**

ABS fire-resistance (UL 94V-0)

**Mounting:**

Panel flush mounting

**Terminal block:**

Plastic NYLON 66 (UL 94V-0)

10A 300Vac, M2.6, 1.3~2.0mm<sup>2</sup>(16~22AWG)

550g / 350g(Aux. Power Code: ADH or ADL)

**Weight:**

**Power**

**Power supply:**

AC115/230V,50/60Hz;

**Optional: AC 85~264V / DC 100~300V, DC 20~56V**

**Excitation supply:**

Excitation supply has to match the input mode / 40mA


**Power consumption:**

5.0VA maximum


**Back up memory:**

By EEPROM

## FRONT PANEL

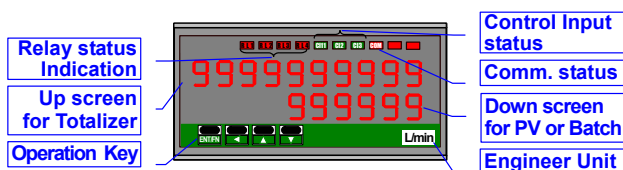


## DIMENSIONS

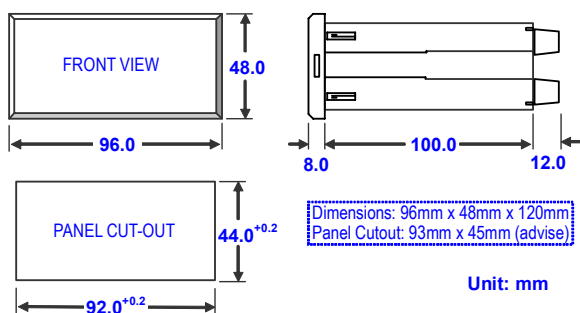


## INSTALLATION

The meter should be installed in a location that does not exceed the maximum operating temperature and provides good air circulation.

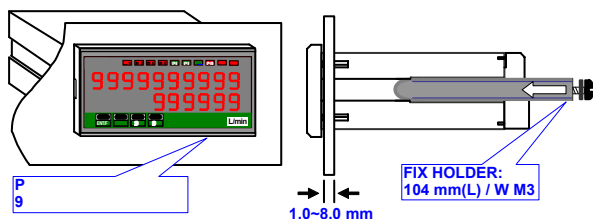


## CONNECTION DIAGRAM

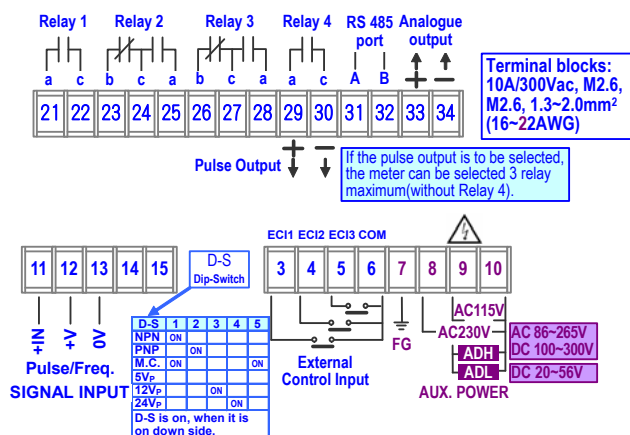


Please check the voltage of power supplied first, and then connect to the specified terminals. It is recommended that power supplied to the meter be protected by a fuse or circuit breaker.

### Power Supply

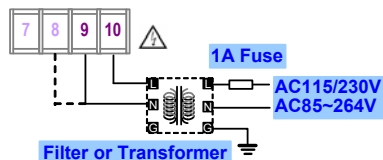

### Sensor input connection

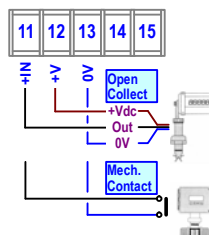


Please change the dip-switch on rear of meter to match the input mode and level.

| D-S                            | 1  | 2  | 3  | 4  | 5  |
|--------------------------------|----|----|----|----|----|
| NPN                            | ON |    |    |    |    |
| PNP                            |    | ON |    |    |    |
| Mech. Contact                  |    | ON |    |    | ON |
| Voltage pulse 5V <sub>p</sub>  |    |    |    |    |    |
| Voltage pulse 12V <sub>p</sub> |    |    | ON |    |    |
| Voltage pulse 24V <sub>p</sub> |    |    |    | ON |    |

D-S is on when it is in down site

### RS485 Communication Port

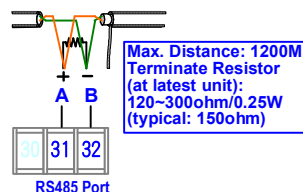

## FUNCTION DESCRIPTION

### Input & Scaling Functions

**Input range:** Auto-Range: 0.01Hz~100.00KHz(option 140KHz),

The meter has been designed very wide input auto-range from 0.01Hz~100.00KHz (Option: 0.01Hz~140.00KHz) that can cover almost any application for RPM, Linear Line Speed and Frequency. User doesn't need to specify the input range.

**Auto range display:** programmable between Auto Range / Semi-Auto Range / manual range, The description as below,

**Auto range** **[AUTO]**: The decimal point will be auto changed according to the input frequency so that keep reading in the highest resolution.

**Semi-Auto range** **[SEMI]**: The decimal point will be auto changed according to the input frequency to keep reading in the highest resolution under setting position of decimal point, According to the setting of decimal point. So, it's possible to show "overflow", if the input frequency is over the display range.

**Manual range** **[MANUAL]**: The decimal point will be fixed

### Time out of input:

In the case of low frequency, the meter can not to identify that is low frequency and no input until the next pulse input. Sometimes, it takes a long period.

The meter builds in a time out function to cut out the reading to be "0".

There are two modes **[MANUAL]** / **[AUTO]** can be programmed.

**Manual** **[MANUAL]**: There is a period named **[t<sub>out</sub>]** can be set from 0.0 sec ~ 999.9 sec. The reading will display "0", when the next pulse doesn't input during the setting time.

**Auto range** **[AUTO]**: The reading will display "0", when the next pulse doesn't input during the time that gave by formula of meter's firmware.

**Period of time out:** Settable: 0.0 sec~999.9sec

If the time out mode **[t<sub>out</sub>]** set to be **[MANUAL]**, it's will be show up.

### Display & Functions

#### Dual display screens:

Down screen can be **Immediate Value(PV)** and **Batch** programmable; Up screen can be **Totalizer and Batch counter** programmable.

#### For Immediate Value(PV)

#### Three setting modes for flow meters:

There are three types setting for **Pulse/Flow-unit(K factor)**, **Flow/Pulse(1/K factor)** and **Flow rate/Hz** to match the difference output description of flow meters. Engineer needs just to check the mode of flowmeter and setting. The totalizer will calculating the flow rate, and accumulation.

**Remark:** A K-Factor is the number of pulses a sensor will generate for each engineering unit of fluid which passes the sensor.

#### Pulse/Flow-unit (K factor):

► **The decimal point of K Factor:** Settable range from 0 to 0.0000.

► **Pulse/Flow-unit(K factor):** Settable range from 0.0001 to 99999  
Ex. A rotor X sensor fit in 4" pipe. The K Factor is 5.2417Pulse/Liter Please select **[PLS/F]** in function **[F.F.P]**, set the **[F.dP]** to **[00000]**, and **[PLS/F]** to **[5.2417]**. The meter will calculate and show the right measuring(Immediate value).

#### Flow/Pulse (1/K factor):

► **The decimal point of 1/K Factor:** Settable range from 0 to 0.0000.

► **Flow/Pulse(1/K factor):** Settable range from 0.0001 to 99999  
Ex. A rotor X sensor fit in 4" pipe. The 1/K Factor is 1.2345Liter/Pulse Please select **[FPLS]** in function **[F.F.P]**, set the **[P.dP]** to **[00000]**, and **[FPLS]** to **[1.2345]**. The meter will calculate and show the right measuring(Immediate value).

#### Volume/Hz:

► **The decimal point of pipe's diameter:** Settable range from 0.0001 to 99999.

► **Diameter of pipe:** Settable range from 0 to 0.0000(Unit)

► **The decimal point of flow rate (Length/sec):** Settable range from 0 to 0.0000.

**Flow Rate:** Settable range from 0.0001 to 99999(Unit)

### Max / Mini recording:

The meter will storage the maximum and minimum value in **[user level]** during power on in order to review drifting of PV. PV / Max(Mini) Hold / RS 485 programmable for down screen in **[dSPLY]** function of **[inPUt Gr oUP]**


### Display functions:

**Present Value** **[PV]**: The display will show the value that Relative to Input signal.

**Maximum Hold** **[MAXHd]** / **Minimum Hold** **[MINHd]**:

The meter will keep display in maximum(minimum) value during power on, until manual reset by front key in **[User level]**, rear terminal is close **[External Control Input(ECI)]** or press front down or up key to reset (according to setting, please refer to the function of the ECI Group)

► Please find the **[ML]** sticker that enclosure the package of the meter to stick on the right side of square orange LED

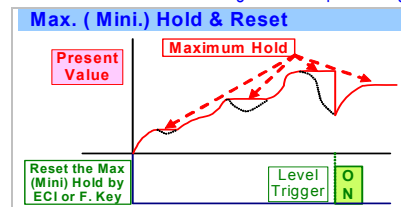

### Remote Display by RS485 command **[F5485]**:

The meter will show the value that received from RS485 sending. In past, The meter normally receive 4~20mA or 0~10V from AO or digital output from BCD module of PLC. We support a new solution that PV shows the value from RS485 command of master can so that can be **save cost and wiring** from PLC.

### Other functions :

The meter is also support relative PV ( $\Delta$ PV) and PV hold functions that set in **[ECI Gr oUP]**. Please refer to explain of ECI functions.

### Low cut:


Settable range from -19999~+99999 counts.

The users can set the value range.

1. If set the positive value (X1) here to display "0" which it expressed to be low-cut the PV between "+X1 (plus)" & "-X1(minus)" /absolute value

**PV< | Setting value(X1) |, the display will be shown 0**


EX: Low Cut is set for 0.50. If the display is from -0.50~+0.50, that will be 0.

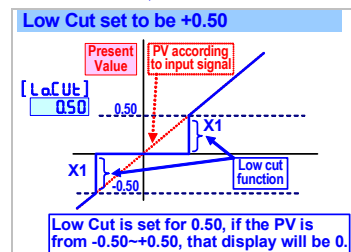

2. If set the negative value (X2) here to display "X2" which it expressed to be low-cut the PV that it's under the X2 setting value;

**PV< Setting value(X2), the display will be shown X2.**

EX: Low Cut is set for -0.01. If the display is < -0.01, and all the display will be -0.01.

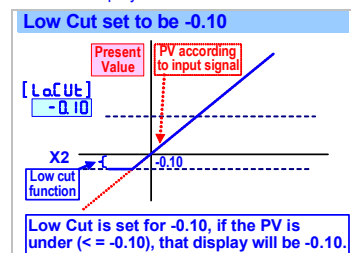


### Digital fine adjust:

Settable range: 0~99999

Users can get Fine Adjustment for Zero & Span of PV by front key of the meter, and "Just Key In" the value which user want to show in the current input signals.

Especially, the [PwPno] & [PwSPn] are not only in zero & span of PV, but also any lower point for [PwPno] & higher point for [PwSPn]. The meter will be linearization for full scale.

The adjustment can be clear in function [PSClr]

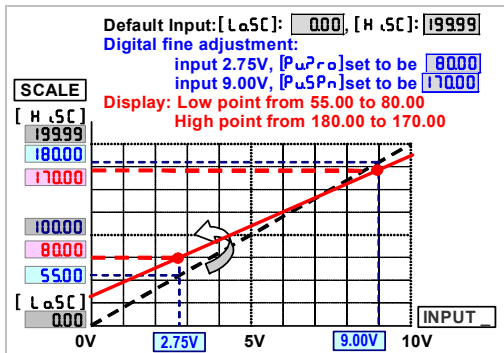

### For Totalizer / Batch / Batch Counter

#### Over flow indication:

ovFL ouFL / Re-cycle rCYCL counting programmable

The up screen will show the [ouFL], if the [oFLnd] set to be [ouFL].


And it will re-count from "0", if the [oFLnd] set to be [rCYCL].

### Reading Stable Function

#### Average display:

Jittery Display caused by the noise or unstable signal. User can set the times to average the readings, and to get smoothly display.

The meter's sampling is 15cycle/sec. If the [AuG](Average) set to be [3] to express the display update with 5 times/sec. The meter will calculate the sampling 1-3 and update the display value. At meantime, the sampling 4-6 will be processed to calculate.

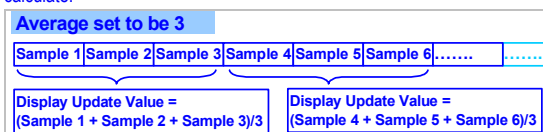

**Remark:** The higher average setting will cause the response time of Relay and Analogue output slower.

#### Digital Filter:

The digital filter can reduce the magnetic noise in field.

The digital filter can reduce the influence of spark noise caused by magnetic of coil.

If the values of samples are over digital filter band (fix in firmware and about 5% of stable reading) 3 times (Digital Filter set to be 3) continuously, the meter will admit the samples and update the new reading. Otherwise, it will be as treat as a noise and skip the samples.

### Control Functions(option)

#### Multi-Cross function selection

4 relay can be programmable to relative Totalizer, Batch, Batch Counter and Immediate Value (PV) with individual functions. Please refer to the detail as following


#### For Immediate Value(PV)

#### Relay energized mode:

Hi / Lo / Go-1.2 / Hi.HLd / Lo.HLd / DO programmable

Hi [Hi] (Fig.1-①): Relay will energize when PV > Set-Point

Lo [Lo] (Fig.1-②): Relay will energize when PV < Set-Point

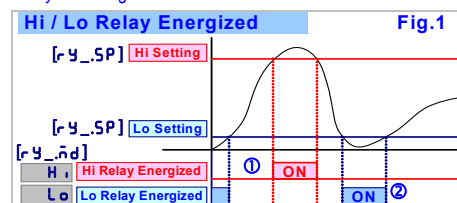


#### Go-1.2 [Go-1.2]:

This function is programmable in Relay 3 only.

If the Relay 3 set to be Go function, the relay will compare with [rY.SP] and [rY2SP].

Go relay energized when the condition is

[rY.SP] (Hi) > PV > [rY2SP] (Lo)

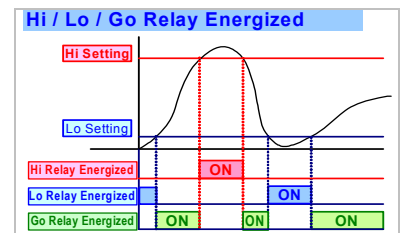

#### Hi.HLd [Hi.HLd] (Lo.HLd [Lo.HLd]):


The relay energized with latched function is for electrical safety and human protection.

For example, a current meter relay installed for the over current alarm of motor. Generally, over current of motor caused by over load, mechanical dead lock, aging of insulation and so on.

Above cases will alarm in the meter, if the user doesn't figure out the real reason and re-start the motor. It may damage the motor. The functions of Hi.HLd & Lo.HLd are designed must be manual reset the alarm after checking out and solving the issue. It's very important idea for electrical safety and human protection.

As the PV Higher (or lower) than set-point, the relay will be energized to latch except manual reset by from key in [user level] or [ECI] (ECI) set to be [rY5t] is closed.

#### Hi(Lo) Energized Latch & Reset

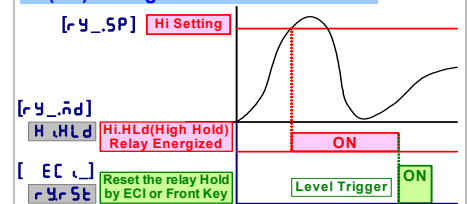

#### DO function [do]:

The function has been designed not only a meter but also an I/O interface. In the case of motor control cabinet can't get the remote function. It's very easily to get the ON/OFF status of switch from CS2 series with RS485 function.

If the [rY.nd] had been set [do], the relay will be energized by RS485 command directly, but no longer to compare with set-point.


#### Start delay band and Start delay time:

The functions have been designed for,

- To avoid starting current of inductive motor (6 times of rated current) with alarm.
- If the [rY.nd] relay energized mode had been set to be [Lo] (Lo) or [Lo.HLd] (Lo & latch). As the meter is power on and no input to display the "0" caused the relay will be energized. User can set a band and delay time to inhibit the energized of relay.

**Start band [rY5b] (Fig.2-①):** Settable range from 0~9999 Counts

**Start delay time [rY5d] (Fig.2-②):** Settable range from 0.0(s)~9(m)59.9(s);

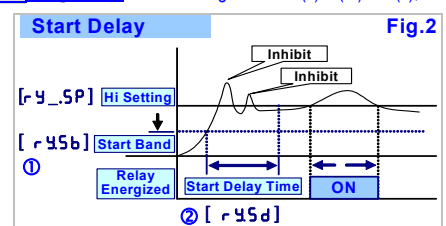




**Hysteresis [F<sub>Y</sub>\_HY] (Fig.3-①):** Settable range from 0~9999 Counts

As the display value is swing near by the set point to cause the relay on and off frequently. The function is to avoid the relay on and off frequently such as compressor.....etc.,

**Relay energized delay [F<sub>Y</sub>\_rd] (Fig.3-②):** Settable range from 0.0(s)~9(m)59.9(s);

The function is to avoid the miss action caused by noise. Sometime, the display value will swing caused by spark of contactor...etc.. User can set a period to delay the relay energized.

**Relay de-energized delay [F<sub>Y</sub>\_Fd] (Fig.3-③):** Settable range from 0.0(s)~9(m)59.9(s);

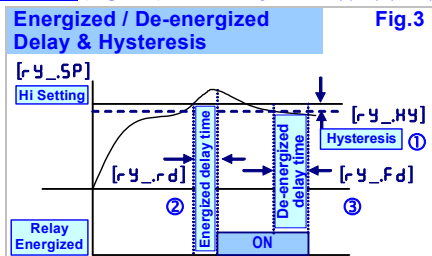

#### For Totalizer / Batch / Batch Counter

For totalizer, The relay output is not only according to relay energized mode, set-point and relay output time but also reset the relay and totalizer. Please refer to the description in following,

**Relay energized mode:** N / R / C Mode programmable


The 3 mode are very useful idea to control the totalizer, batch and batch counter. The relay energized condition is according to not only energized level, but also time and reset for totalizer, batch and batch counter.

**Relay energized mode:** N / C / R mode

**Relay output time:** Settable range from 0.0(s)~9(m)59.9(s)


**N mode:**

Totalizer & relay reset by manual  
When the condition of **Set Point** is met:  
1. The relay will be energized;  
2. The totalizer / batch count will run as same as usual, until manual reset by front key or by ECI of rear terminal, the totalizer / batch count will be reset to "0" and the relay will be de-energized.

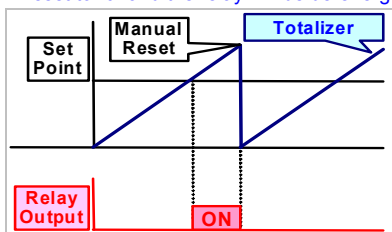

**R mode:**

Totalizer & relay reset by time setting of relay output time [F<sub>Y</sub>\_ot]  
When the condition of **Set Point** is met:  
1. The relay will be energized, until the time is over Relay output time [F<sub>Y</sub>\_ot] (Relay \_ output times).  
2. The totalizer / batch count will run as same as usual; until the time is over Relay output time [F<sub>Y</sub>\_ot] (Relay \_ output time), The totalizer / batch count will be reset to "0".

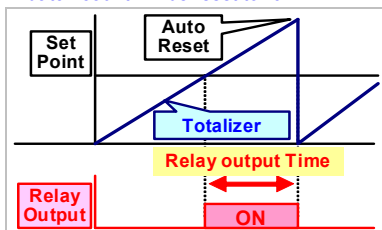


**C mode:**

Totalizer auto reset & relay reset by time setting of relay output time [F<sub>Y</sub>\_ot]

When the condition of **Set Point** is met:

1. The relay will be energized, until the time is over Relay output time [F<sub>Y</sub>\_ot] (Relay \_ output times).
2. The totalizer / batch count will be reset to "0" immediately, then counts-up from "0".

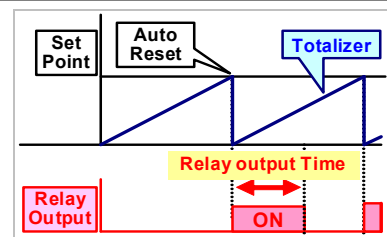

#### External Control Inputs (ECI)

CS2-TM offers 3 point external control inputs (ECI) with Multi-Cross selection function. User can set the ECI functions corresponding to Immediately value, totalizer, batch and batch count.

The three external control inputs are individually programmable to perform specific meter control or display functions. All E.C.I. have been designed in level trigger actions. Please pay attention, the ECI1 or ECI2 input will be disable while UP or Down Key has been set to be "YES".

#### Debouncing time:

The function is for avoiding noise signal to into the meter. And The basic period is 8 m-seconds. It means you set the number that has to multiple 8 m-seconds.

For example:

[dEBnL] set to be 5, it means 5 x 8mseconds = 40mseconds


#### For Immediate Value (PV)

##### Functions:

Relative PV / PV Hold / Reset Max or Mini. Hold / DI / Reset for Relay Energized latch programmable.


**Relative PV [FELPu] or Tare:**

The [EC \_] can be set to be [FELPu] function. When the E.C.I. is closed, the reading will show the differential value.

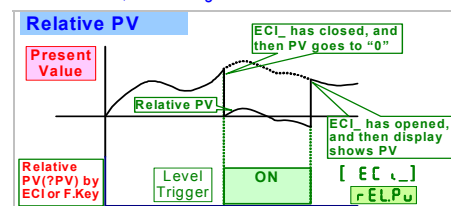

**PV Hold [PuHld]:**


The [EC \_] can be set to be [PuHld] (PV Hold) function. The display will be hold when the ECI is closed, until the ECI is to be open. Please refer to the below figures,

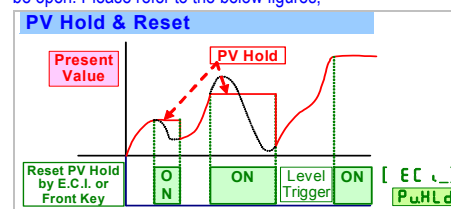

**Reset for Maximum or Minimum Hold [RSt]:**

When the [dSPLy] function in [inPUt GrOuP] selected [RSt] or [MinHld], the display will show Maximum or Minimum value.

The [EC \_] function can be set to be [RSt] function to reset the maximum and minimum value in [User Level] by terminals of ECI (close). Please refer to the figure as below.

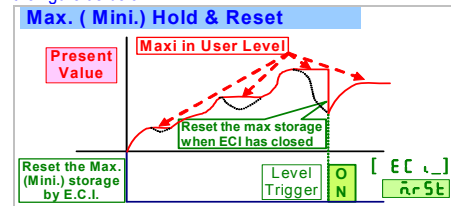


**DI [dI]:**

The E.C.I can be set to be [dI] function, when the meter building in RS485 port. It is easier to get remote monitoring a switch status through the meter as like as DI of PLC.

### Reset for Relay Energized Latch [r4r5t]:

If the relay energized mode has been set to be [H.HLd] (Energized latch), and the [EC] can be set to be [r4r5t] (Reset the Relay energized latch). When the PV meets the condition of relay energizing, the relay will be energized and latch until the ECI is to be closed.

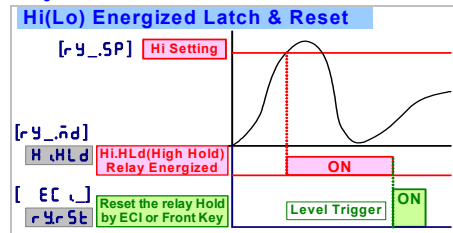


### For Totalizer / Batch / Batch Counter

#### ECI Functions:

##### Gate function:


Gate / Reset

Totalizer / batch count will be stopped to accumulate, when ECI is closed, until the ECI open again. The Totalizer / batch count will accumulate continuously after the ECI open.

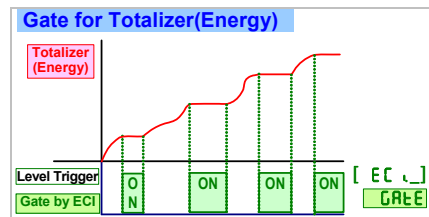

##### Reset Function:

Totalizer / batch count will be reset to "0", when ECI is closed, until the ECI open again. The Totalizer / batch count will accumulate from 0 after the ECI open.

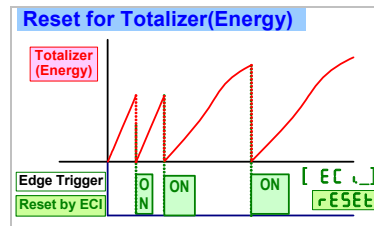

### Output range:

Voltage: 0~5V / 0~10V / 1~5V programmable

Current: 0~10mA / 0~20mA / 4~20mA programmable

Output High / Low scale, output limit, fine adjustment


#### Functions:

##### Output range high [RaH5]:

To setting the Display value High to versus output range High(as like as 20mA in 4~20)

##### Output range low [RaL5]:


To setting the Display value Low to versus output range Low(as like as 4mA in 4~20)

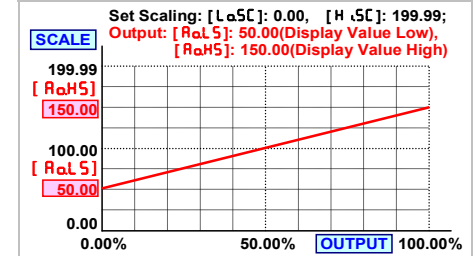

The range between [RaH5] and [RaL5] should be over 20% of span at least; otherwise, it will be got less resolution of analogue output.

##### Output High Limit [RaHt]:

0.00~110.00% of output High User can set the high limit of output to avoid a damage of receiver or protection system.

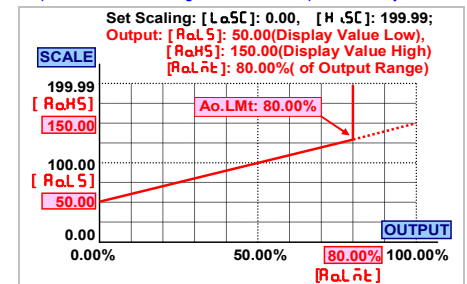

#### Fine zero & span adjustment:

Users can get Fine Adjustment of analogue output by front key of the meter. Please connect standard meter to the terminal of analogue output. To press the front key(up or down key) of meter to adjust and check the output.

**Zero adjust [RaZro]:** Fine Zero Adjustment for Analog Output;

Settable range: -38011~27524;

**Span adjust [RaSPn]:** Fine Span Adjustment for Analog Output;

Settable range: -38011~27524;

### Pulse Output(optional)

The meter offers a pulse output corresponding to totalizer / batch count programmable. The terminals are same as relay 4 so that can not exit relay 4 and pulse output in one meter.

The pulse output is 1000Hz maximum, and 50% duty cycle (0.5msec. minimum).

#### Pulse divider:

Settable range from 1~9999.

► **PLSdu** set to be [1]: It will output 1 pulse, when totalizer / batch count increases "1Count".

Ex: It will output 1 pulse, when totalizer from 12345.678 increase to 12345.679.

► **PLSdu** set to be [1000]: It will output 1 pulse, when totalizer / batch count increases "1000Count".

Ex: It will output 1 pulse, when totalizer from 12345.678 increase to 12346.678.

#### Duty cycle[PLSHd]:

Settable from 0(Auto: Duty cycle=50%)/1~5000(x 4msec.)


### Analogue output(option)

Please specify the output type either a 0~10V or 4(0)~20mA in ordering. The meter offers one analogue output with Multi-Cross selection function. User can program the output to correspond immediately value, totalizer, batch and batch count, and also the output low and high can be programmable which it's related to various display values easier in [RaGROUP].

Reverse slope output is possible by reversing point positions. Please refer to the detail description as below,

### RS 485 communication(option)

CS2 series supports Modbus RTU mode protocol to be used as Remote Terminal Unit (RTU) for monitoring and controlling in a SCADA (Supervisor Control And Data Acquisition) system. The baud rate can be up to 38400 bps. It's not only can be read the measured value and DI (external control inputs) status but also controls the relays output (DO) by RS485 communication ports.

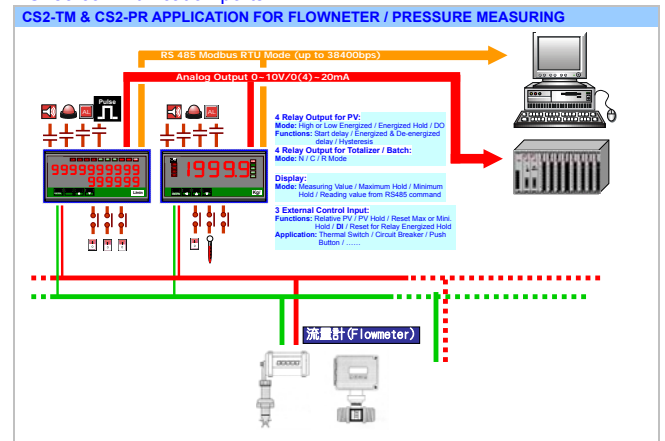


### Remote Display:

The meter will show the value that received from RS485 command. In past, The meter normally receive 4~20mA or 0~10V from AO or digital output from BCD module of PLC .We support a new solution that PV shows the value from RS485 command of master so that can be **save cost and wiring** from PLC.

When the [d5PL9] set to be RS485, it means, the PV screen will show the number from RS485 command & data. The data (number) will be same as PV that will make the totalizer accumulate and compare with set-point, analogue output and ECI functions so that is to control analogue output, relay energized and so on.

#### CS2-TM APPLICATION FOR REMOTE DISPLAY FROM RS485 COMMAND

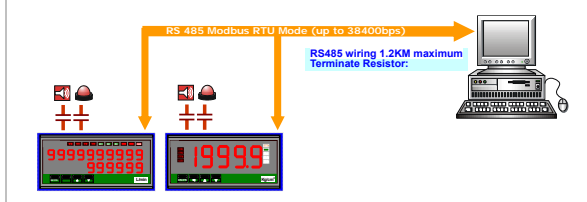

### Calibration

System calibration by front key. The process of calibration, please refer to the operating manual

## ■ ERROR MESSAGE


BEFORE POWER ON, PLEASE CHECK THE SPECIFICATION AND CONNECTION AGAIN.

SELF-DIAGNOSIS AND ERROR CODE:

| DISPLAY    | DESCRIPTION   | REMARK   |
|------------|---|--|
| ouFL       | Display is positive-overflow (Signal is over display range)           | (Please check the input signal)                |
| -ouFL      | Display is negative-overflow (Signal is under display range)          | (Please check the input signal)                |
| ouFL       | ADC is positive-overflow (Signal is higher than input range high 20%) | (Please check the input signal)                |
| -ouFL      | ADC is negative-overflow (Signal is lower than input range low -20%)  | (Please check the input signal)                |
| EEP ↔ FAiL | EEPROM occurs error   | (Please send back to manufactory for repaired) |
| AiCnG ↔ Pu | Calibrating Input Signal do not process                               | (Please process Calibrating Input Signal)      |
| AiC ↔ FAiL | Calibrating Input Signal error  | (Please check Calibrating Input Signal)        |
| AoCnG ↔ Pu | Calibrating Output Signal do not process                              | (Please process Calibrating Output Signal)     |
| AoC ↔ FAiL | Calibrating Output Signal error                                       | (Please check Calibrating Output Signal)       |



## FRONT PANEL:

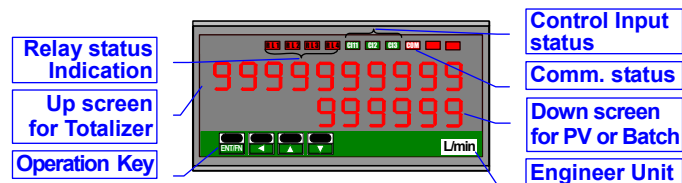

CS2-TM has two display screens and I/O status indication for purposes.

### Numeric Screens

- **Up screen:** 0.28"(0.71cm) red high-brightness LED for 10 digital totalizer.
- **Down screen:** 0.28"(0.71cm) green high-brightness LED for Immediate Value 4 2/3 digital or Batch 6 digital.

### I/O Status Indication

- **Relay Energized:** 4 square red LED
  - RL1** display when Relay 1 energized;
  - RL2** display when Relay 2 energized;
  - RL3** display when Relay 3 energized;
  - RL4** display when Relay 4 energized;
- **External Control Input Energized:** 3 square green LED
  - EC1** display when E.C.I. 1 close(dry contact)
  - EC2** display when E.C.I. 2 close(dry contact)
  - EC3** display when E.C.I. 3 close(dry contact)
- **RS485 Communication:** 1 square red LED
  - COM** will flash when the meter is receive or send data, and **COM** flash quickly means the data transient quicker.

### Stickers:

Each meter has a sticker what are functions and engineer label enclosure.

- **Relay energized mode:** **HH Hi Lo LL DO**

- **E.C.I. functions mode:**

**PV.H** PV.H(PV Hold) / **Tare** Tare / **DI** DI /  
**M.RS** M.RS(Maximum or Minimum Reset) /  
**R.RS** R.RS(Reset for Relay Latch)

- **Engineer Label:** over 80 types.

- **Operating Key:** 4 keys for **Enter(Function)** / **Shift(Escape)** / **Up key** / **Down key**

|                      | Setting Status                       | Function Index  |
|----------------------|--------------------------------------|---|
| <b>Up key</b>        | Increase number                      | Go back to previous function index                    |
| <b>Down key</b>      | Decrease number                      | Go to next function index                             |
| <b>Shift key</b>     | Shift the setting position           | Go back to this function index, and abort the setting |
| <b>Enter/Fun key</b> | Setting Confirmed and save to EEPROM | From the function index to get into setting status    |

### Pass Word:

Setting range:0000~9999;  
 User has to key in the right pass word so that get into **[ Programming Level ]** . Otherwise, the meter will go back to measuring page. If user forgets the password, please contact with the service window.

### Function Lock:

There are 4 levels selectable for lock.

- **None** **nonE**: no lock all.
- **User Level** **USEr**: User Level lock. User can get into User Level for checking but setting.
- **Programming Level** **EnG**: Programming level lock. User can get into programming level for checking but setting.
- **ALL** **ALL**: All lock. User can get into all level for checking but setting.


### Front Key Function

- The **Key** can be set to be the same function as the setting of EC11.  
 Ex. The EC11 set to be **PuHLd** and the function **[E.1=UP]** set to be **YES** in **[ EC , GrOuP ]**. When user presses **Key**, the PV will hold as like as EC11 close.
- The **Key** can be set to be the same function as the setting of EC12.  
 Ex. The EC12 set to be **FELPu** and the function **[E.2=dn]** set to be **YES** in **[ EC , GrOuP ]**. When user presses **Key**, the PV will show relative value as like as EC12 close.


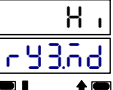
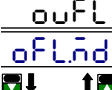
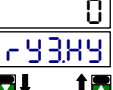
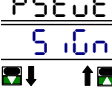

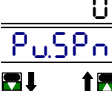

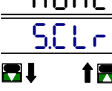
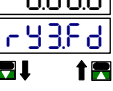



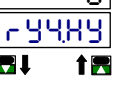

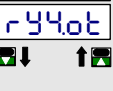

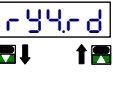
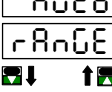
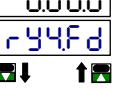
► **If the front key function has been set, the terminal input for EC1 will be disabling.**

## ■ OPERATING DIAGRAM (The detail description of operation, please refer to operating manual.)

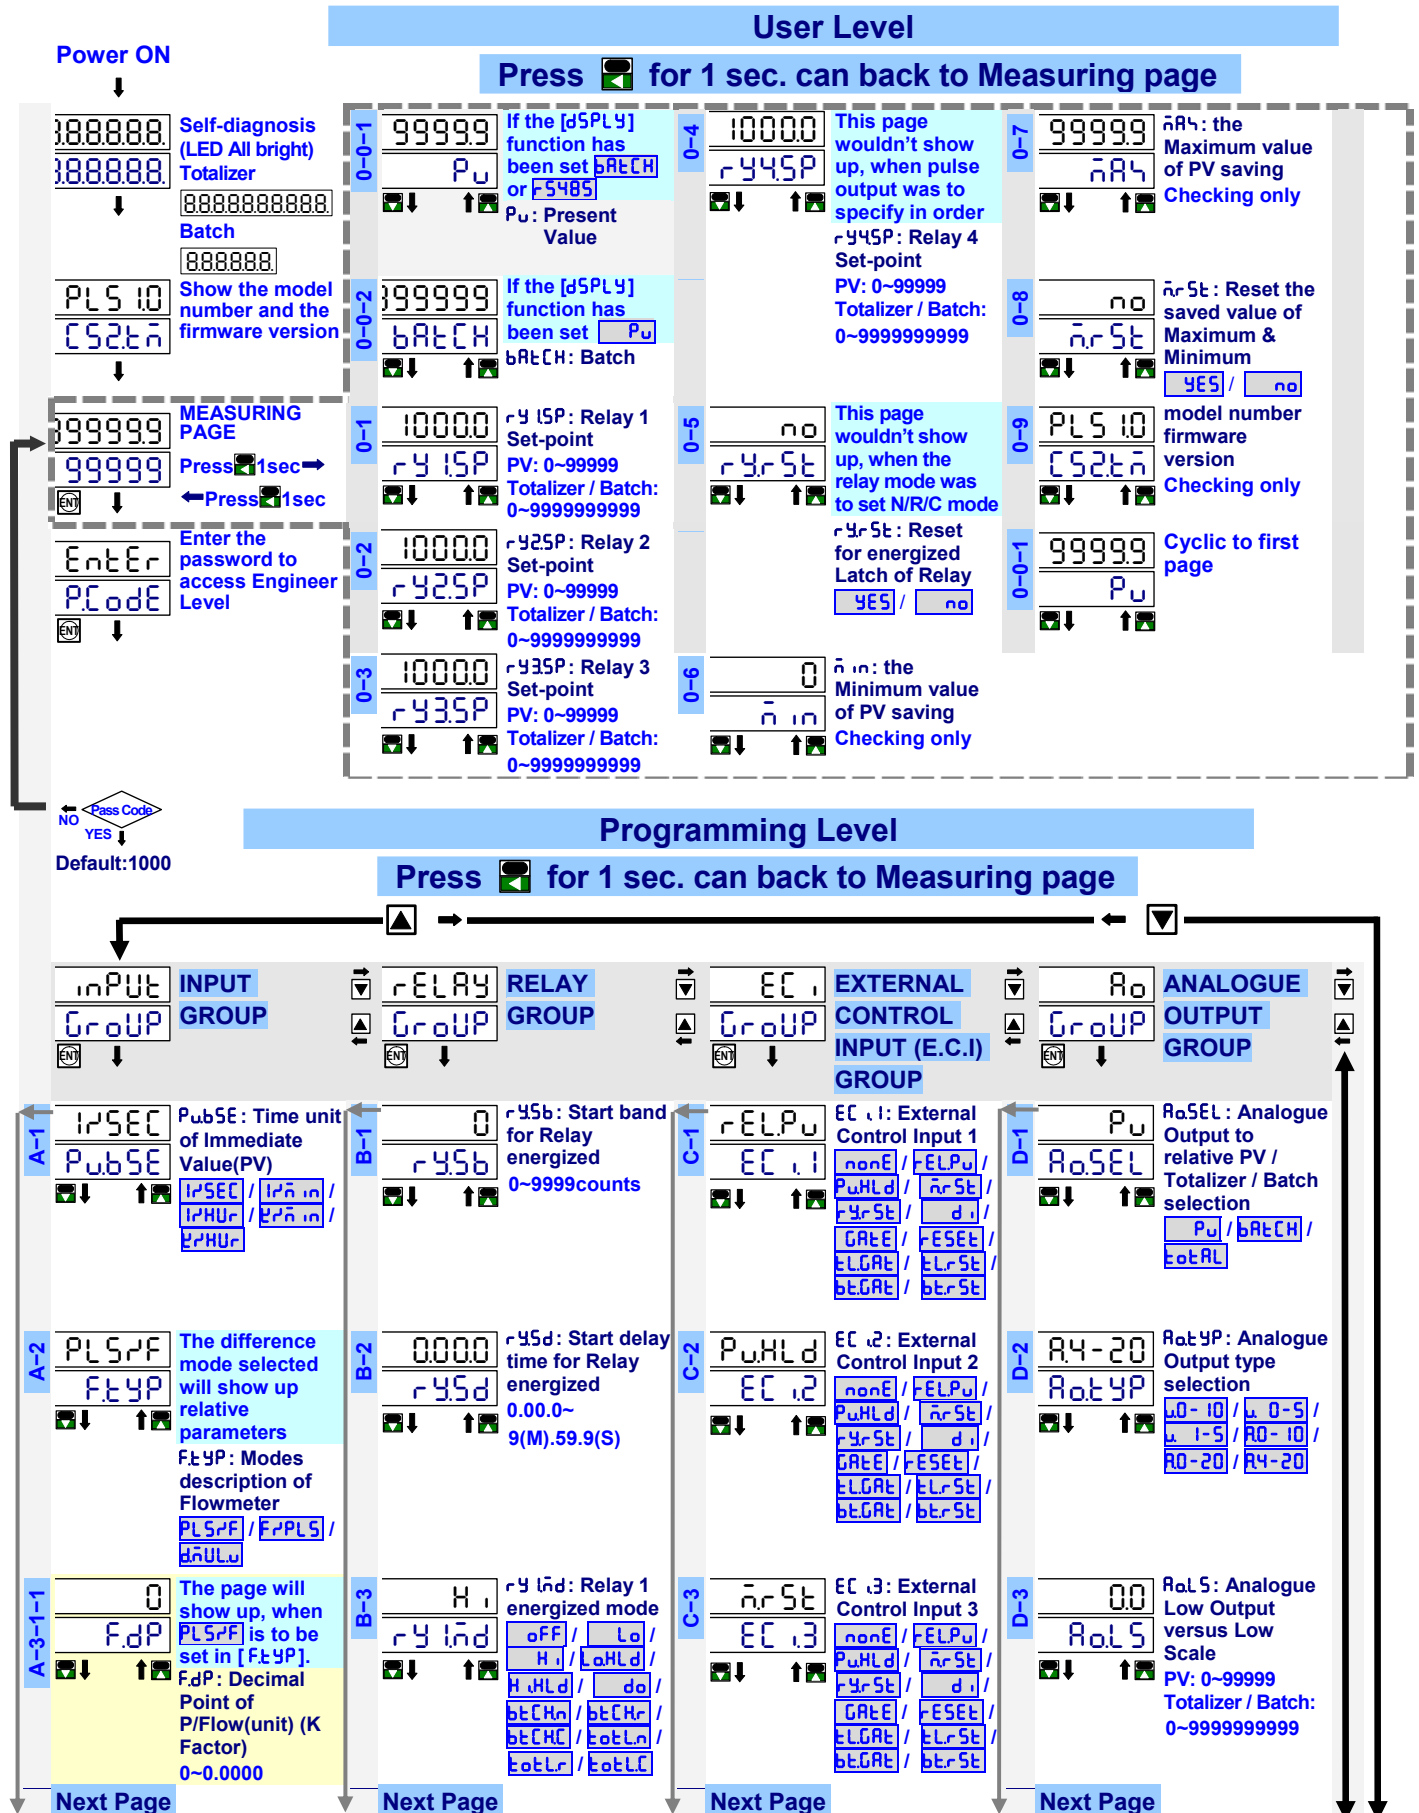CS2-TM(Pulse)


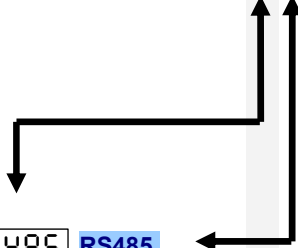





|   |   |  |  |
|---|---|--|--|
| <p>A-3-1-2</p> <div>10000</div> <div>PLSRF</div> <p>The page will show up, when PLSRF is to be set in [FtYP]. PLSRF: P/Flow(unit) (K Factor) Setting 0.0001~99999</p>       | <p>B-4</p> <div>0</div> <div>rY lHY</div> <p>The page will show up, when [rY lnd] set to be Hi / Lo mode rY lHY: Relay 1 Hysteresis 0~5000 counts</p>                       | <p>C-4</p> <div>12</div> <div>dEbnc</div> <p>dEbnc: Debouncing of external control Input 5~255(x8ms)</p> | <p>D-4</p> <div>10000</div> <div>RoHS</div> <p>RoHS: Analogue High Output versus High Scale PV: 0~99999 Totalizer / Batch: 0~999999999</p> |
| <p>A-3-2-1</p> <div>0</div> <div>FdP</div> <p>The page will show up, when FdP is to be set in [FtYP]. FdP: Decimal Point of Flow/P (1/K Factor) 0~0.0000</p>                | <p>B-4-1</p> <div>0000</div> <div>rY lot</div> <p>The page will show up, when [rY lnd] set to be N/R/C mode rY lot: Relay 1 energizing time 0.00.0~9(M).59.9(S)</p>         | <p>C-5</p> <div>no</div> <div>E1=UP</div> <p>E1=UP: ECI.1 set to be UP Key function YES / no</p>         | <p>D-5</p> <div>0</div> <div>RoPro</div> <p>RoPro: Fine Zero Adjustment for Analogue Low Output -38011~27524</p>                           |
| <p>A-3-2-2</p> <div>10000</div> <div>FzPLS</div> <p>The page will show up, when FzPLS is to be set in [FtYP]. FzPLS: Flow/Pulse (1/K Factor) Setting 0.0001~99999</p>       | <p>B-5</p> <div>0000</div> <div>rY lrd</div> <p>The page will show up, when [rY lnd] set to be Hi / Lo mode rY lrd: Relay 1 energized delay time 0.00.0~9(M).59.9(S)</p>    | <p>C-6</p> <div>no</div> <div>E2=dn</div> <p>E2=dn: ECI.2 set to be Down Key function YES / no</p>       | <p>D-6</p> <div>0</div> <div>RoSPn</div> <p>RoSPn: Fine Span Adjust. for Analogue High Output -38011~27524</p>                             |
| <p>A-3-3-1</p> <div>0</div> <div>d indP</div> <p>The page will show up, when d indP is to be set in [FtYP]. d indP: Decimal Point of diameter of pipe 0~0.0000</p>          | <p>B-6</p> <div>0000</div> <div>rY lFd</div> <p>The page will show up, when [rY lnd] set to be Hi / Lo mode rY lFd: Relay 1 de-energized delay time 0.00.0~9(M).59.9(S)</p> |  | <p>D-7</p> <div>none</div> <div>PSClr</div> <p>PSClr: Zero &amp; Span Clear for Adjustment none / RoPro / RoSPn / both</p>                 |
| <p>A-3-3-2</p> <div>10000</div> <div>d indRt</div> <p>The page will show up, when d indRt is to be set in [FtYP]. d indRt: Diameter of pipe setting 0.0001~99999 (Unit)</p> | <p>B-7</p> <div>H</div> <div>rY2nd</div> <p>rY2nd: Relay 2 energized mode OFF / Lo / Hi / LoHLd / HHLd / do / bttCKn / bttCKr / bttCKC / bttCLn / bttCLr / bttCLC</p>       |  | <p>D-8</p> <div>11000</div> <div>RoLnt</div> <p>RoLnt: Analog Output High Limit 0.00~110.00%</p>   |
| <p>A-3-3-3</p> <div>0</div> <div>uLdP</div> <p>The page will show up, when uLdP is to be set in [FtYP]. uLdP: Decimal Point of Flow speed (Length/sec) 0~0.0000</p>         | <p>B-8</p> <div>0</div> <div>rY2HY</div> <p>The page will show up, when [rY2nd] set to be Hi / Lo mode rY2HY: Relay 2 Hysteresis 0~5000 counts</p>                          |  |  |
| <p>A-3-3-4</p> <div>0</div> <div>uLrHP</div> <p>The page will show up, when uLrHP is to be set in [FtYP]. uLrHP: Volume/Hz, Flow speed setting 0.0001~99999 (Unit)</p>      | <p>B-8-1</p> <div>0000</div> <div>rY2ot</div> <p>The page will show up, when [rY2nd] set to be N/R/C mode rY2ot: Relay 2 energizing time 0.00.0~9(M).59.9(S)</p>            |  |  |
| <p>A-4</p> <div>0</div> <div>dP</div> <p>dP: Decimal point of set-point for Really energized 0~0.0000</p>   | <p>B-9</p> <div>0000</div> <div>rY2rd</div> <p>The page will show up, when [rY2nd] set to be Hi / Lo mode rY2rd: Relay 2 energized delay time 0.00.0~9(M).59.9(S)</p>       |  |  |
| <p>A-5</p> <div>0</div> <div>tLdP</div> <p>tLdP: Decimal point of totalizer 0~0.0000</p>  | <p>B-10</p> <div>0000</div> <div>rY2Fd</div> <p>The page will show up, when [rY2nd] set to be Hi / Lo mode rY2Fd: Relay 2 de-energized delay time 0.00.0~9(M).59.9(S)</p>   |  |  |
| <p>Next Page</p>  | <p>Next Page</p>  |  |  |

|  |  |
|--|--|
| <b>A-6</b><br><br>UP.dSP: Up screen displays totalizer or batch Counter<br>tEtL / tEtCnt  | <b>B-11</b><br><br>rY3.nd: Relay 3 energized mode<br>oFF / Lo / H. / LoHLd / H.HLd / do / bEtCHn / bEtCHr / bEtCHL / bEtCLn / bEtCLr / bEtCLL / Co-12 |
| <b>A-7</b><br><br>oFL.nd: overflow mode of totalizer or batch<br>ouFL / rCYCL   | <b>B-12</b><br><br>The page will show up, when [rY3.nd] set to be Hi / Lo mode<br>rY3.HY: Relay 3 Hysteresis<br>0~5000 counts                         |
| <b>A-8</b><br><br>S.iGn: Sign of accumulate up or down<br>PS.tuE / dURL   | <b>B-12-1</b><br><br>The page will show up, when [rY3.nd] set to be N/R/C mode<br>rY3.ot: Relay 3 energizing time<br>0.00.0~9(M).59.9(S)              |
| <b>A-9</b><br><br>Pu.SPn: Fine High point Adjustment for PV display<br>0~99999  | <b>B-13</b><br><br>The page will show up, when [rY3.nd] set to be Hi / Lo mode<br>rY3.rd: Relay 3 energized delay time<br>0.00.0~9(M).59.9(S)         |
| <b>A-10</b><br><br>SCLr: Clear Fine Span Adjustment for PV display<br>nonE / Pu.SPn  | <b>B-14</b><br><br>The page will show up, when [rY3.nd] set to be Hi / Lo mode<br>rY3Fd: Relay 3 de-energized delay time<br>0.00.0~9(M).59.9(S)      |
| <b>A-11</b><br><br>dSPLY: Display Function<br>Pu / rYnHd / rAR4Hd / rS485 / bARtCH  | <b>B-15</b><br><br>rY4.nd: Relay 4 energized mode<br>oFF / Lo / H. / LoHLd / H.HLd / do / bEtCHn / bEtCHr / bEtCHL / bEtCLn / bEtCLr / bEtCLL       |
| <b>A-12</b><br><br>LoCtE: Low Cut Function<br>-19999~29999  | <b>B-16</b><br><br>The page will show up, when [rY4.nd] set to be Hi / Lo mode<br>rY4.HY: Relay 4 Hysteresis<br>0~5000 counts                       |
| <b>A-13</b><br><br>t.o.nd: Input time out Mode<br>AUto / rARnUL   | <b>B-16-1</b><br><br>The page will show up, when [rY4.nd] set to be N/R/C mode<br>rY4.ot: Relay 4 energizing time<br>0.00.0~9(M).59.9(S)            |
| <b>A-14</b><br><br>If [t.o.nd] has been selected rARnUL, This function will be showed out<br>t.o: How long will be time out<br>0.0~999.9sec | <b>B-17</b><br><br>The page will show up, when [rY4.nd] set to be Hi / Lo mode<br>rY4.rd: Relay 4 energized delay time<br>0.00.0~9(M).59.9(S)       |
| <b>A-15</b><br><br>rARnGE: Reading Range with decimal point switching.<br>AUto / SEn / rARnUL   | <b>B-18</b><br><br>The page will show up, when [rY4.nd] set to be Hi / Lo mode<br>rY4Fd: Relay 4 de-energized delay time<br>0.00.0~9(M).59.9(S)     |

Next Page

Next Page
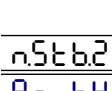
|   |   |
|---|---|
| <b>E-1</b><br><br>RS485 GROUP  |  |
| <b>E-2</b><br><br>AdrES: Device number of the meter<br>1~255                   |   |
| <b>E-3</b><br><br>bAUd: Baud rate<br>1200 / 2400 / 4800 / 9600 / 19200 / 38400 |   |
| <b>E-4</b><br><br>Pr.tY: Parity<br>nStb1 / nStb2 / odd / EvEn                 |   |

|      |   |   |
|------|---|---|
| A-16 | <div>5</div> <div>Avg</div> <div> </div>      | Avg: Average update for PV<br>1(None)~99 times  |
| A-17 | <div>0</div> <div>dFilt</div> <div> </div>    | dFilt: Digital filter<br>0(None)/1~99 times   |
| A-18 | <div>1</div> <div>PLSdu</div> <div> </div>    | The page will show up, when pulse output has specified<br>PLSdu: Pulse divider<br>0000~9999                           |
| A-19 | <div>0</div> <div>PCode</div> <div> </div>    | PCode: Pass Code for enter Engineer Level<br>0000~9999  |
| A-20 | <div>nonE</div> <div>FLoCk</div> <div> </div> | FLoCk: Function Level Lock<br><div> <div>nonE</div> <div>USEr</div> </div> <div> <div>EnG</div> <div>ALL</div> </div> |

▶ Please refer to operating manual for detail description